

Print to 100% scale. Test that the print scale is accurate against the PCB or a ruler, and adjust the scale if required.